

SURF CHAMP SURFER

PLAYBOARD INFORMATION

RUBBER RINGS

A - A-10217	(13)
B - A-10220	(5)
C - A-10223	(3)
D - A-13151	(2)
E - A-15705	(1)

PARTS LIST

1. A-3290 Ball Gate.
 2. A-9143 Ball Rebound Rubber.
 3. A-8215 Ball Deflector.
 4. C-16111 Plastic Shield Set.
 5. Blue Pop Bumper A-10436 and A-15200 Cap in Red & Blue.
 6. A-9393 Green Plastic Ball Guide.
 7. A-9394 Green Plastic Ball Guide.
 8. D-11966 Red Rollover Insert with D-11968 White Button.
 9. C-15707 Yellow Plastic Hole Base with C-15708 Sw. Arm.
 10. 5 Pos. Drop Target Bank with A-16115 Design in Red.
 11. A-14043 Spinning Target Shield.
 12. A-16116 Spinning Target.
 13. A-11071 Metal Flat Rail.
 14. A-13101 Metal Flat Rail.
 15. A-16118 Metal Flat Rail.
 16. A-4832 Ball Guide Rail. (Wire Form) (2)
 17. A-4833 Ball Guide Rail. (Wire Form) (1)
 18. A-6931 Ball Guide Rail. (Wire Form) (1)
 19. A-8514 Ball Guide Rail. (Wire Form) (1)
 20. A-13798 Ball Snubber Rail. (Wire Form) (2)
 21. A-13833 Ball Guide Rail. (Wire Form) (2)
 22. A-14571 Ball Guide Rail. (Wire Form) (1)
 23. A-14572 Ball Guide Rail. (Wire Form) (1)
 24. C-7393 Wood Rail. (Left Side)
 25. C-9771 Wood Rail. (Center)
 26. C-13977 Wood Rail. (Right Side)
 27. A-10542 Steel Pin. (2)
 28. A-4806 Top Arch with "F", "7, 8" Pos.
 29. A-14792 Mini Post Screw. (3)
 30. C-13150 Flipper (White)
 31. A-15836 Kicking Rubber.
 32. A-15838 Kicking Rubber.
 33. C-9767 Ball Shooter Gage.
 34. D-13647-1A Card Holder.
- C-11561 White Plastic Post (1") High. (34)
A-14487 White Split Post Base. (2)
A-14488 White Split Post Cap. (2)

LIB. = LIBERAL.

CON. = CONSERVATIVE.

